


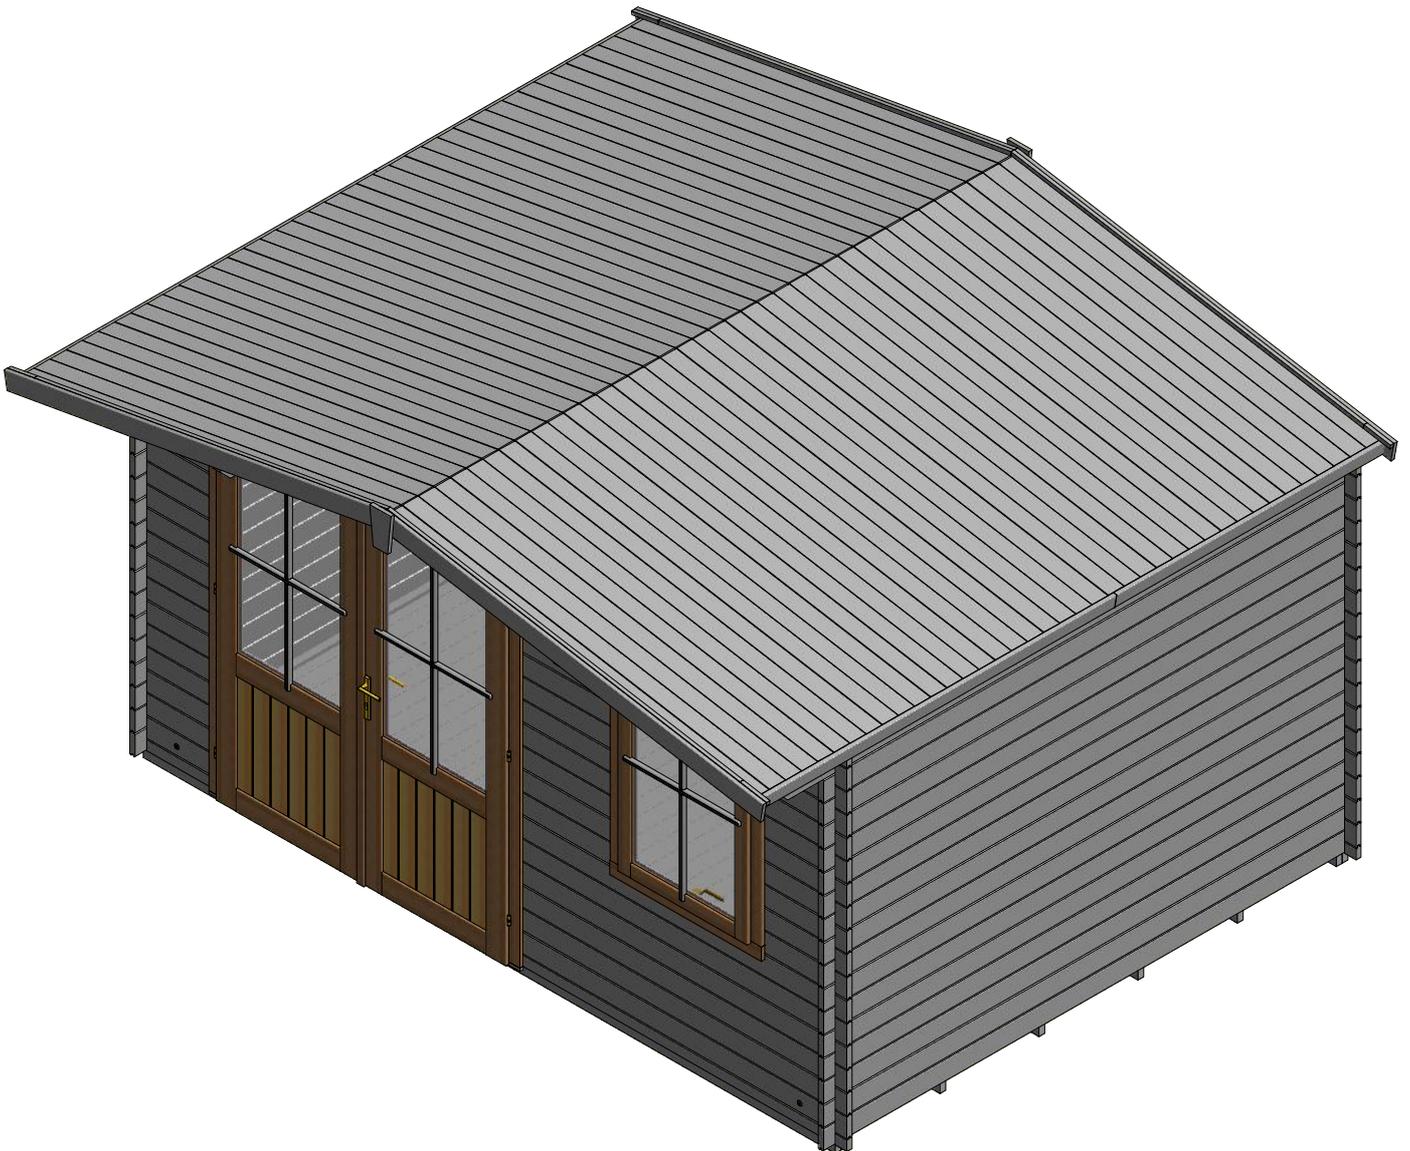

INSTALLATION MANUAL

Rhine 40/30 (28mm)

Log cabin



Important!



If you have bought shingles, please use our provided shingle installation instructions.

Unique Cabin Reference Number.

Component details for Rhine 40/30 (28mm)



EN.3860

8 of required
Bearers
Pressure treated

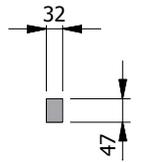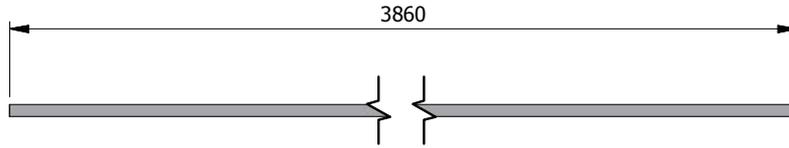



A28.510.70.0.0

28 of required
Wall log

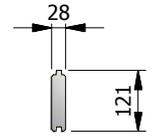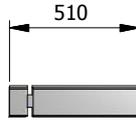


A28.510.0.0.0

11 of required
Wall log

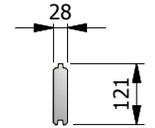



A28.1810.70.0.0

6 of required
Wall log

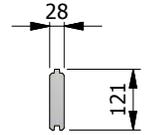



A28.3000.70.70.0

32 of required
Wall log

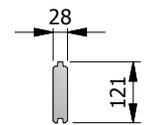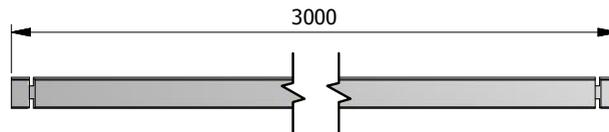



A28.3250.70.320.0

2 of required
Wall log

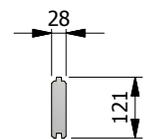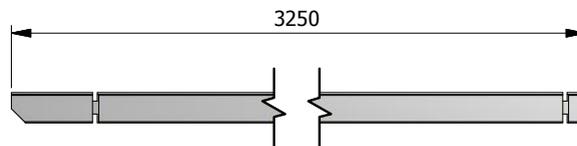



A28.4000.70.70.0

18 of required
Wall log
(Inc. one spare)

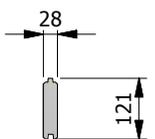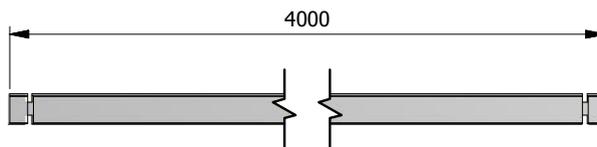



B28.510.70.0.0

1 of required
Bottom wall log

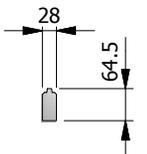



B28.1810.70.0.0

1 of required
Bottom wall log

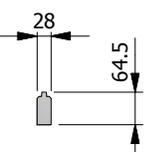

B28.4000.70.70.0



1 of required
Wall log

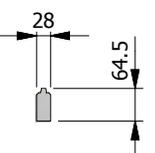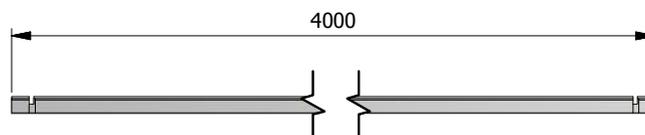

Component details for Rhine 40/30 (28mm)



XN28.8L.3500.70.570.0

1 of required
Top wall log

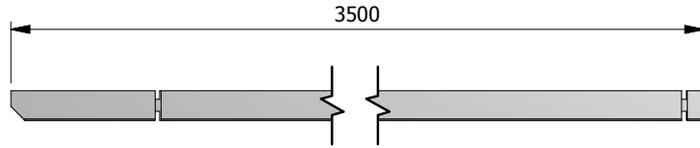



XN28.8R.3500.70.570.0

1 of required
Wall log

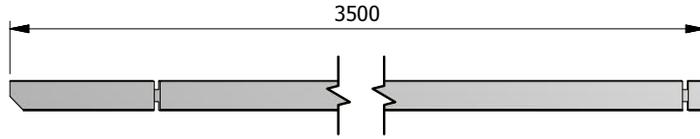



P45.3500.65.565.0

1 of required
Purlin

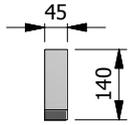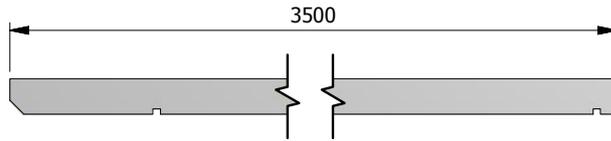



P45.8L.3500.65.565.0

1 of required
Purlin

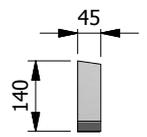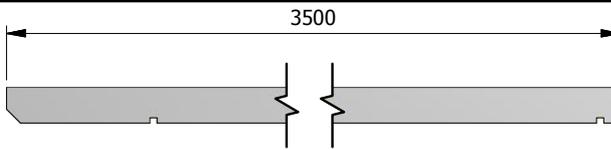


P45.8R.3500.65.565.0

1 of required
Wall log

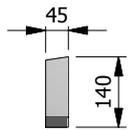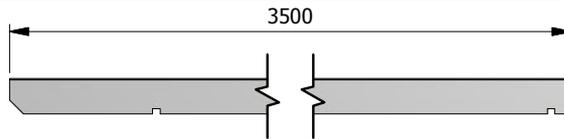



HN.2000

4 of required
Eaves edging
(required to be cut to size on site)





J.1960.B

4 of required
Storm brace





J.3000

7 of required
Floor trims and
roof edge reinforcement
(required to be cut to size on site)





N.2000

9 of required
Apex trims and wind brace
(required to be cut to size on site)



Z.195.A



2 of required
Trapezoid

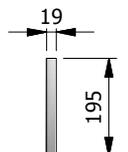

Component details for Rhine 40/30 (28mm)



ZN.2150.C10

4 of required
Fascia boards





AP.28.4000.RHINE.DW.

2 of required
Apex


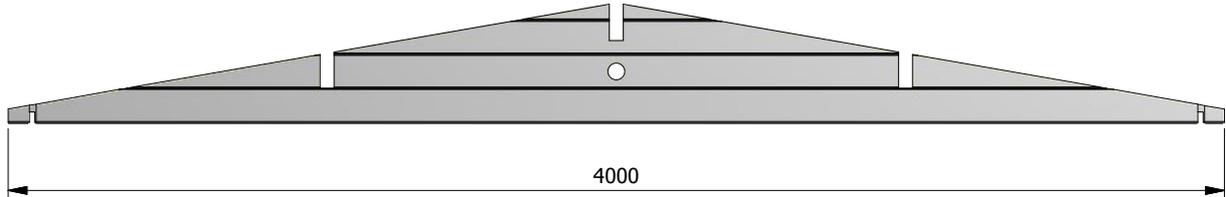


Component details for Rhine 40/30 (28mm)

F.2080
80 of required
Roof Board



F.2770
44 of required
Floor Board
(Inc. one spare)




Double door - 28mm

1 of required



E9 Window 28mm

1 of required

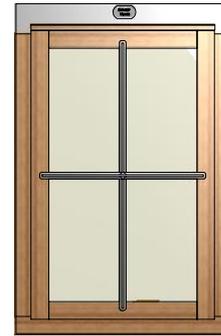


| FIXINGS & ACCESSORIES | |
|--|-----|
| ITEM | QTY |
| 20 mm screws to vents | 9 |
| 35 mm screws trapezoids, Eaves edging, roof (J) trim, fascia board to wind brace, SMB brackets | 120 |
| 50 mm screws for fascia boards to Purlins & bearers | 28 |
| 55mm screws for floor trim (J) | 28 |
| 70 mm screws for bottom logs & door frame & Purlins | 44 |
| 60 mm M6 bolt | 8 |
| M6x25 mm Washers | 16 |
| M6 Nuts | 8 |
| 40mm nails for floor and roof boards | 700 |
| SMB075 (28) Interlocking Window to Log Connecting bracket | 8 |
| SMB077 (28) Interlocking Door to Log Connecting bracket | 16 |
| Sets of vents | 2 |
| Door handles and accessories | 1 |
| Window handle set & accessories | 1 |
| Generic Assembly Instructions for Log Cabins | 1 |

Bearer Layout for Rhine 40/30


Log Cabin Bearer Layout Rhine 40/30

We suggest preparing minimum overall base dimension of 4060x3060mm

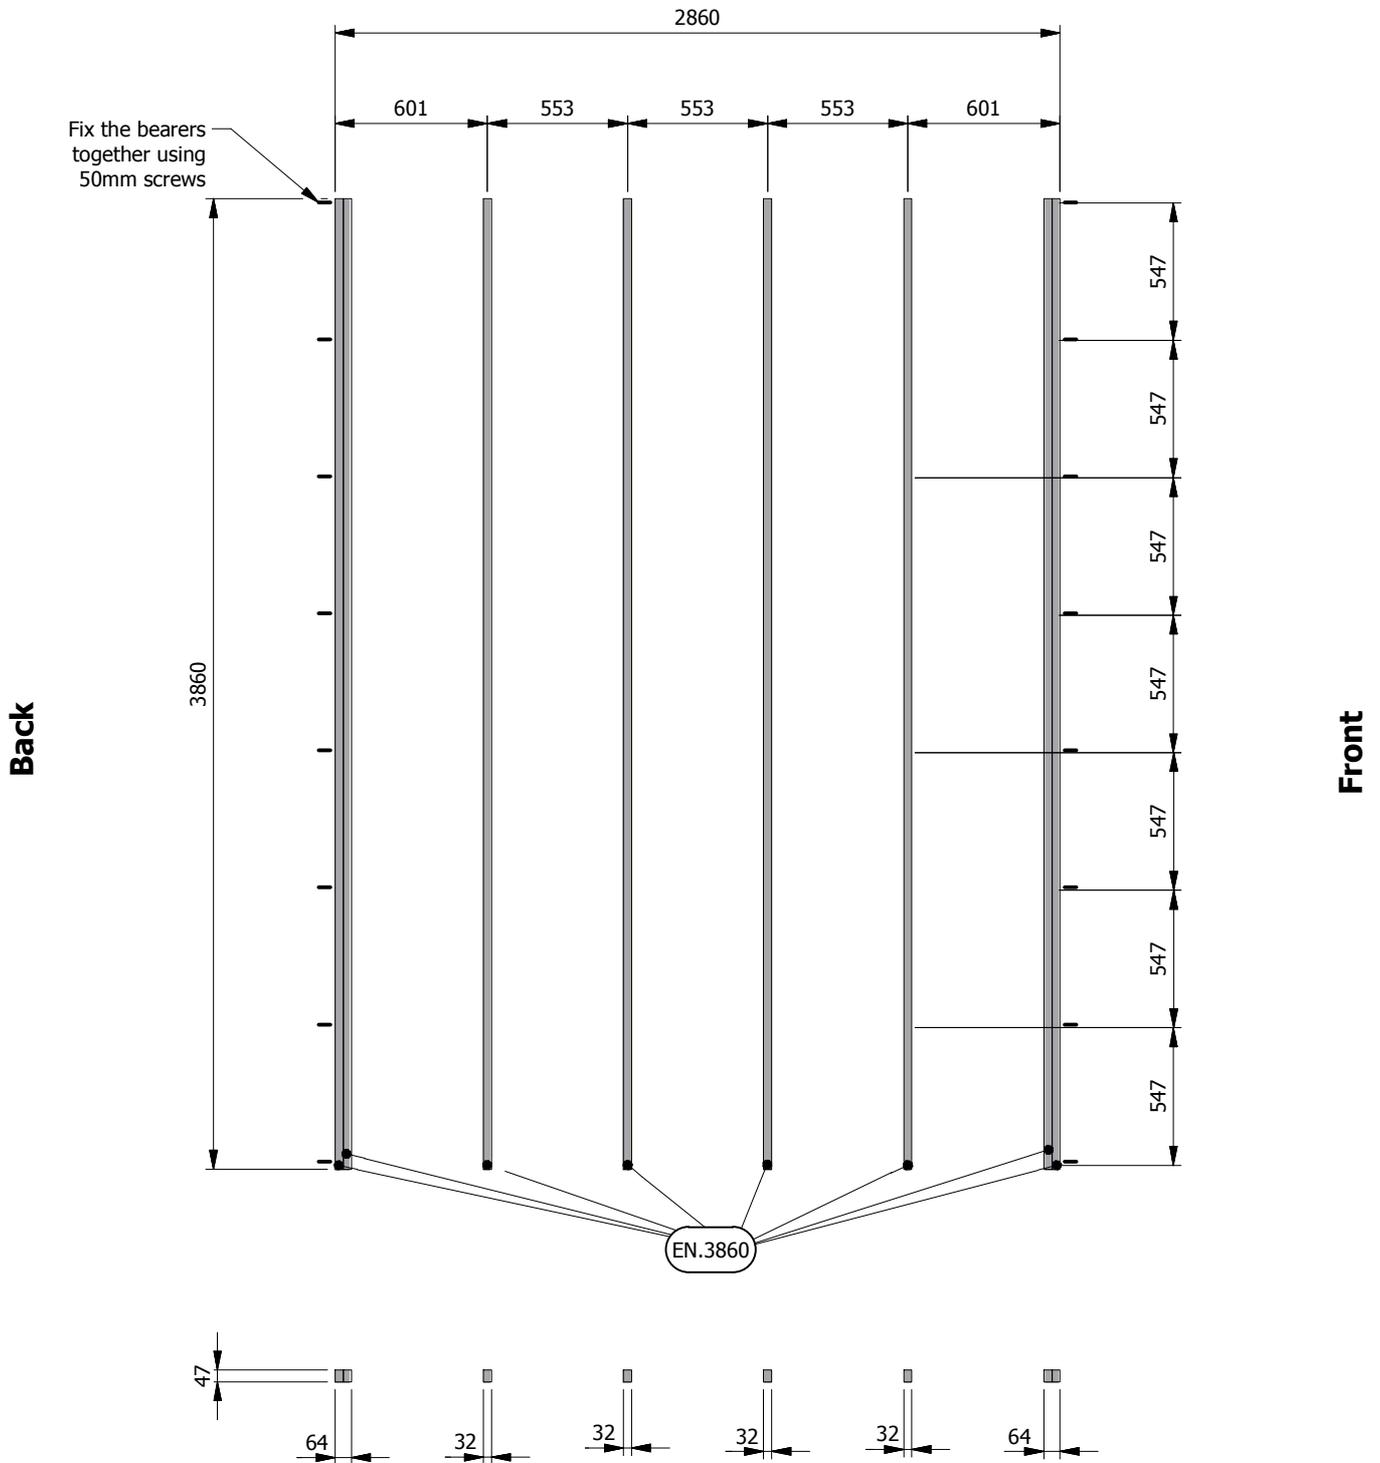


Wall Layout for Rhine 40/30 (28mm)

Front Wall

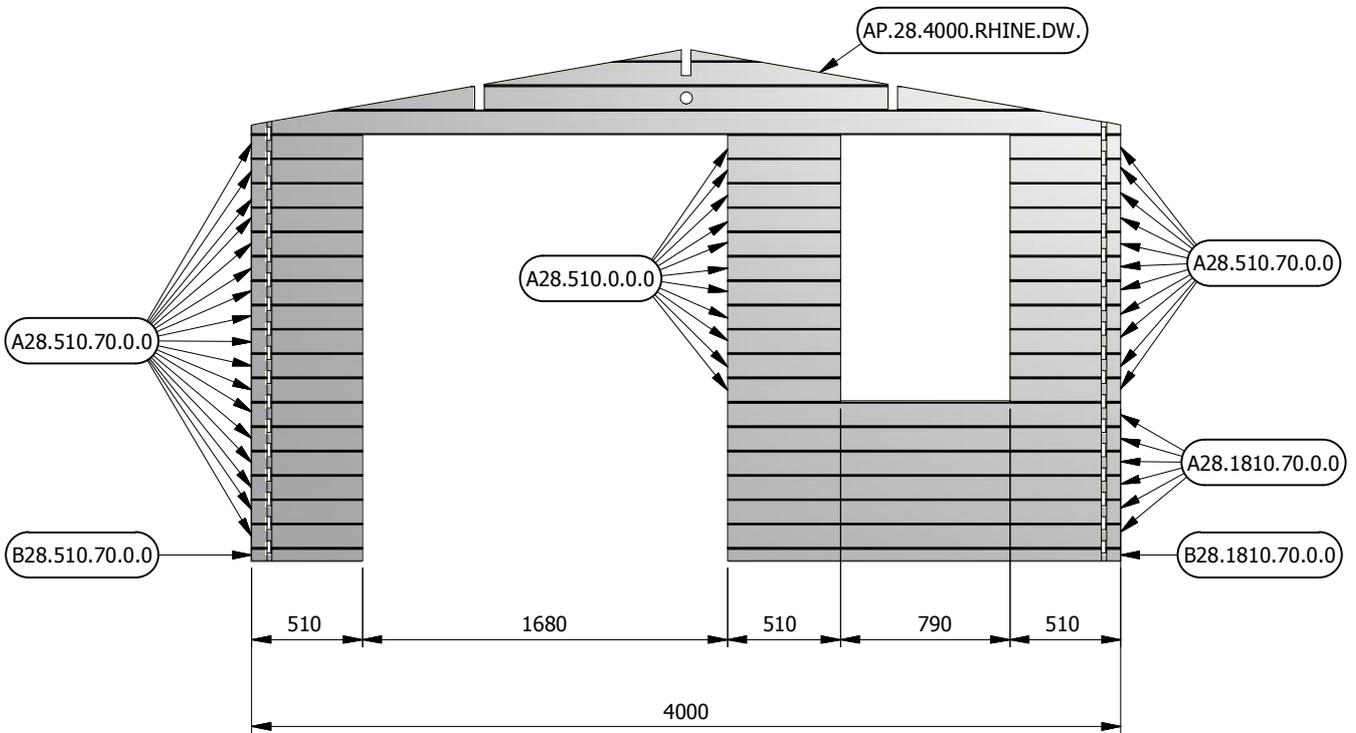


Rear Wall

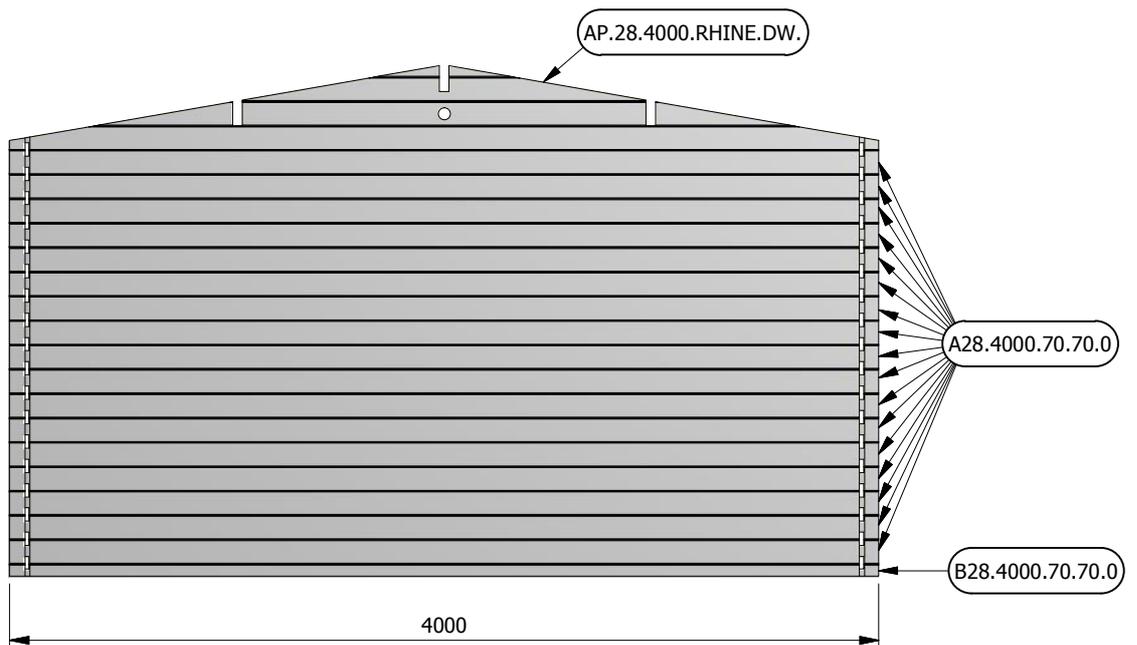


Wall Layout for Rhine 40/30 (28mm)


Side Wall

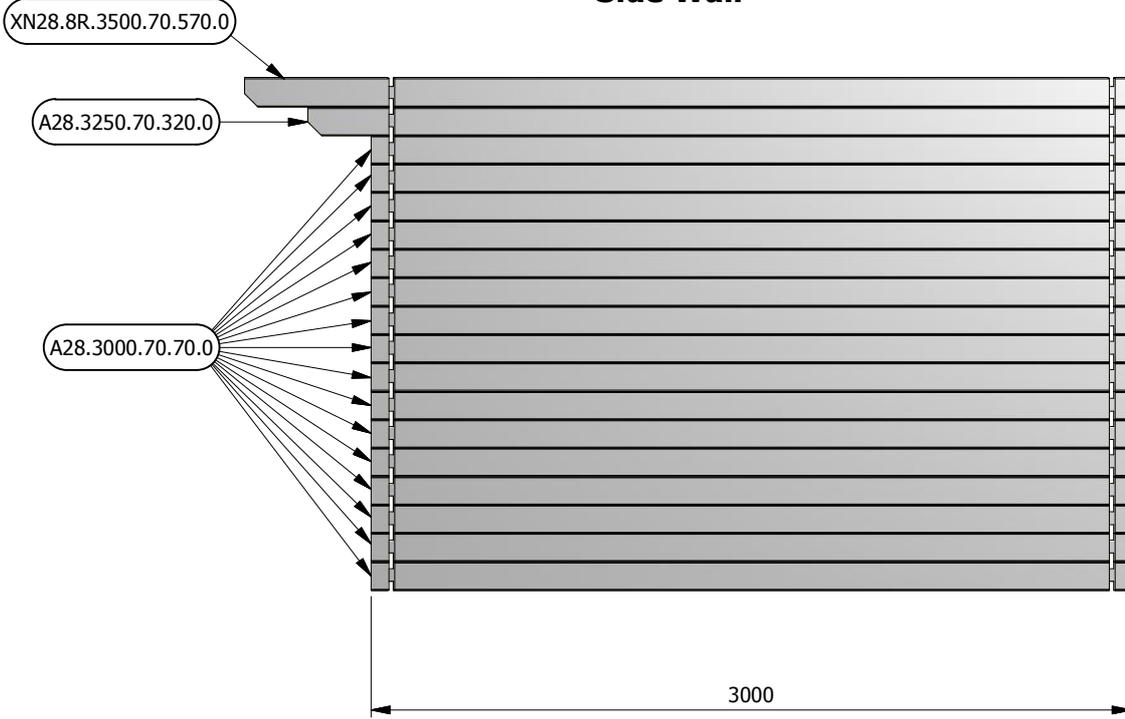


Side Wall

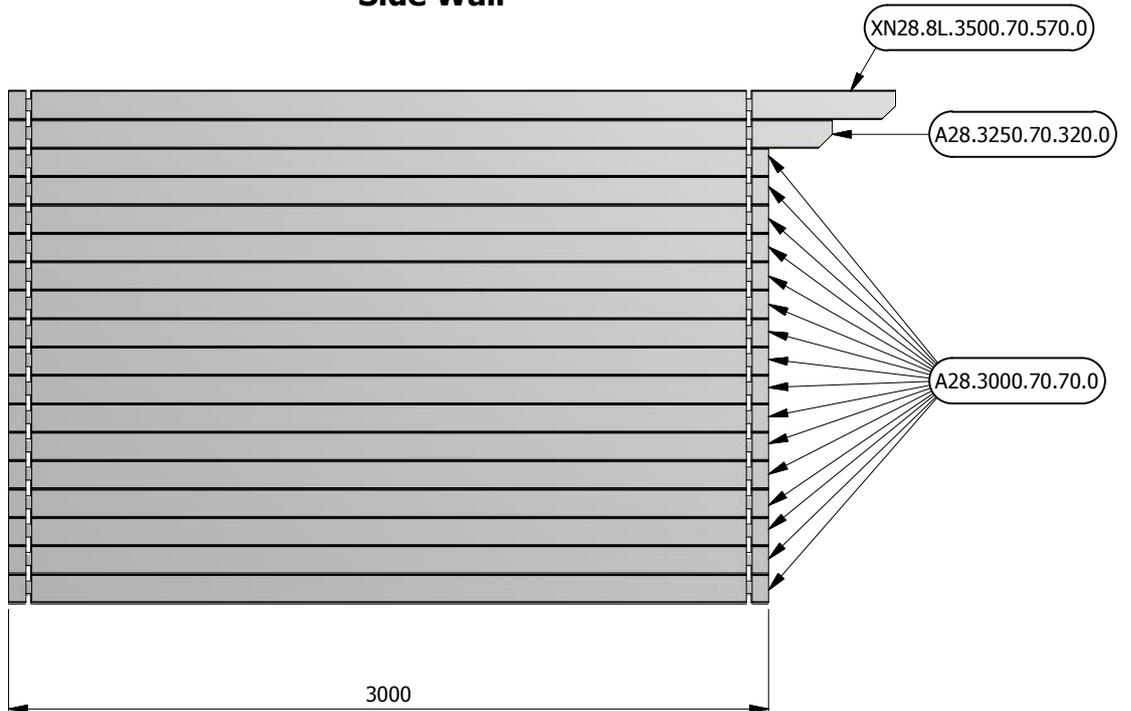

Purlin and Roof Installation for Rhine 40/30 (28mm)

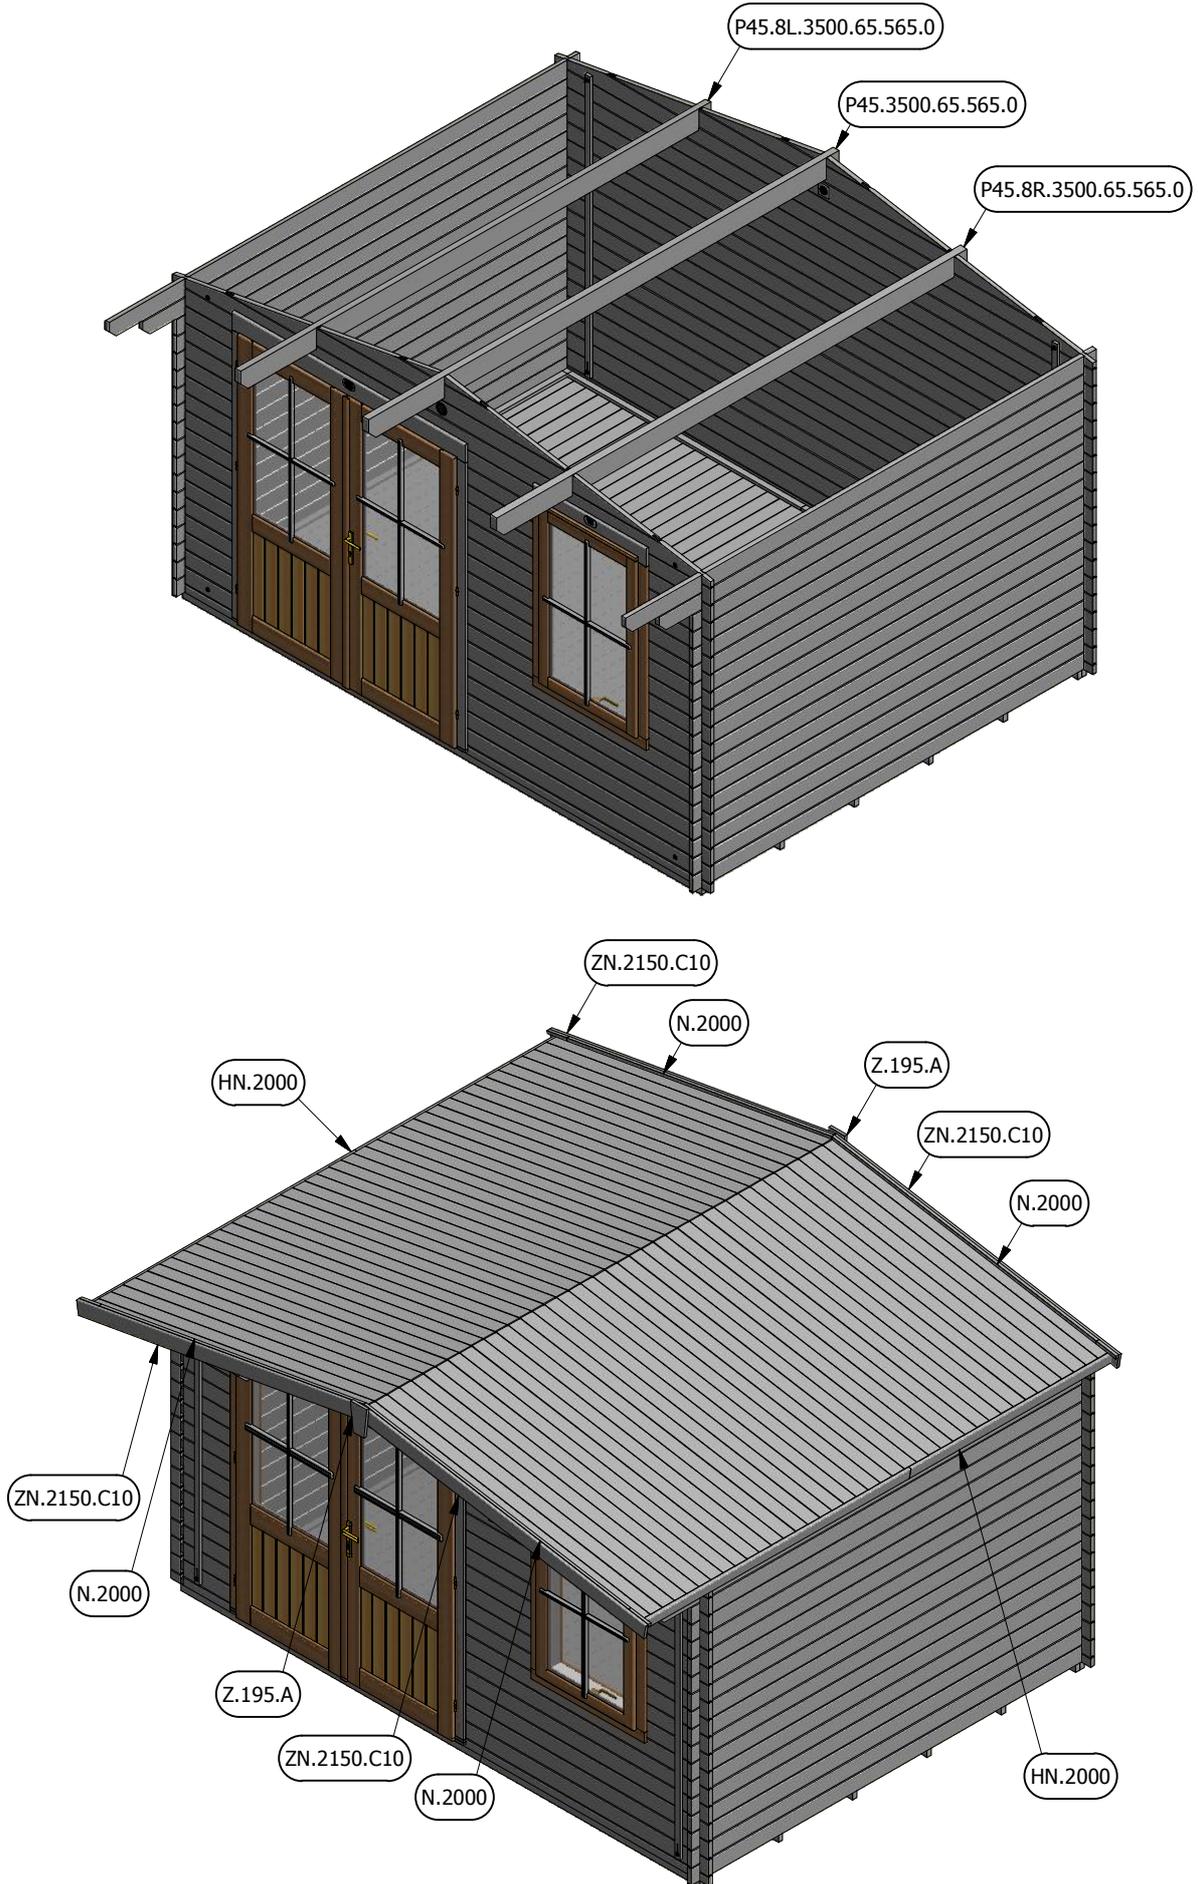

Roof Insulation Panel Layout for Premium Plus Rhine 40/30

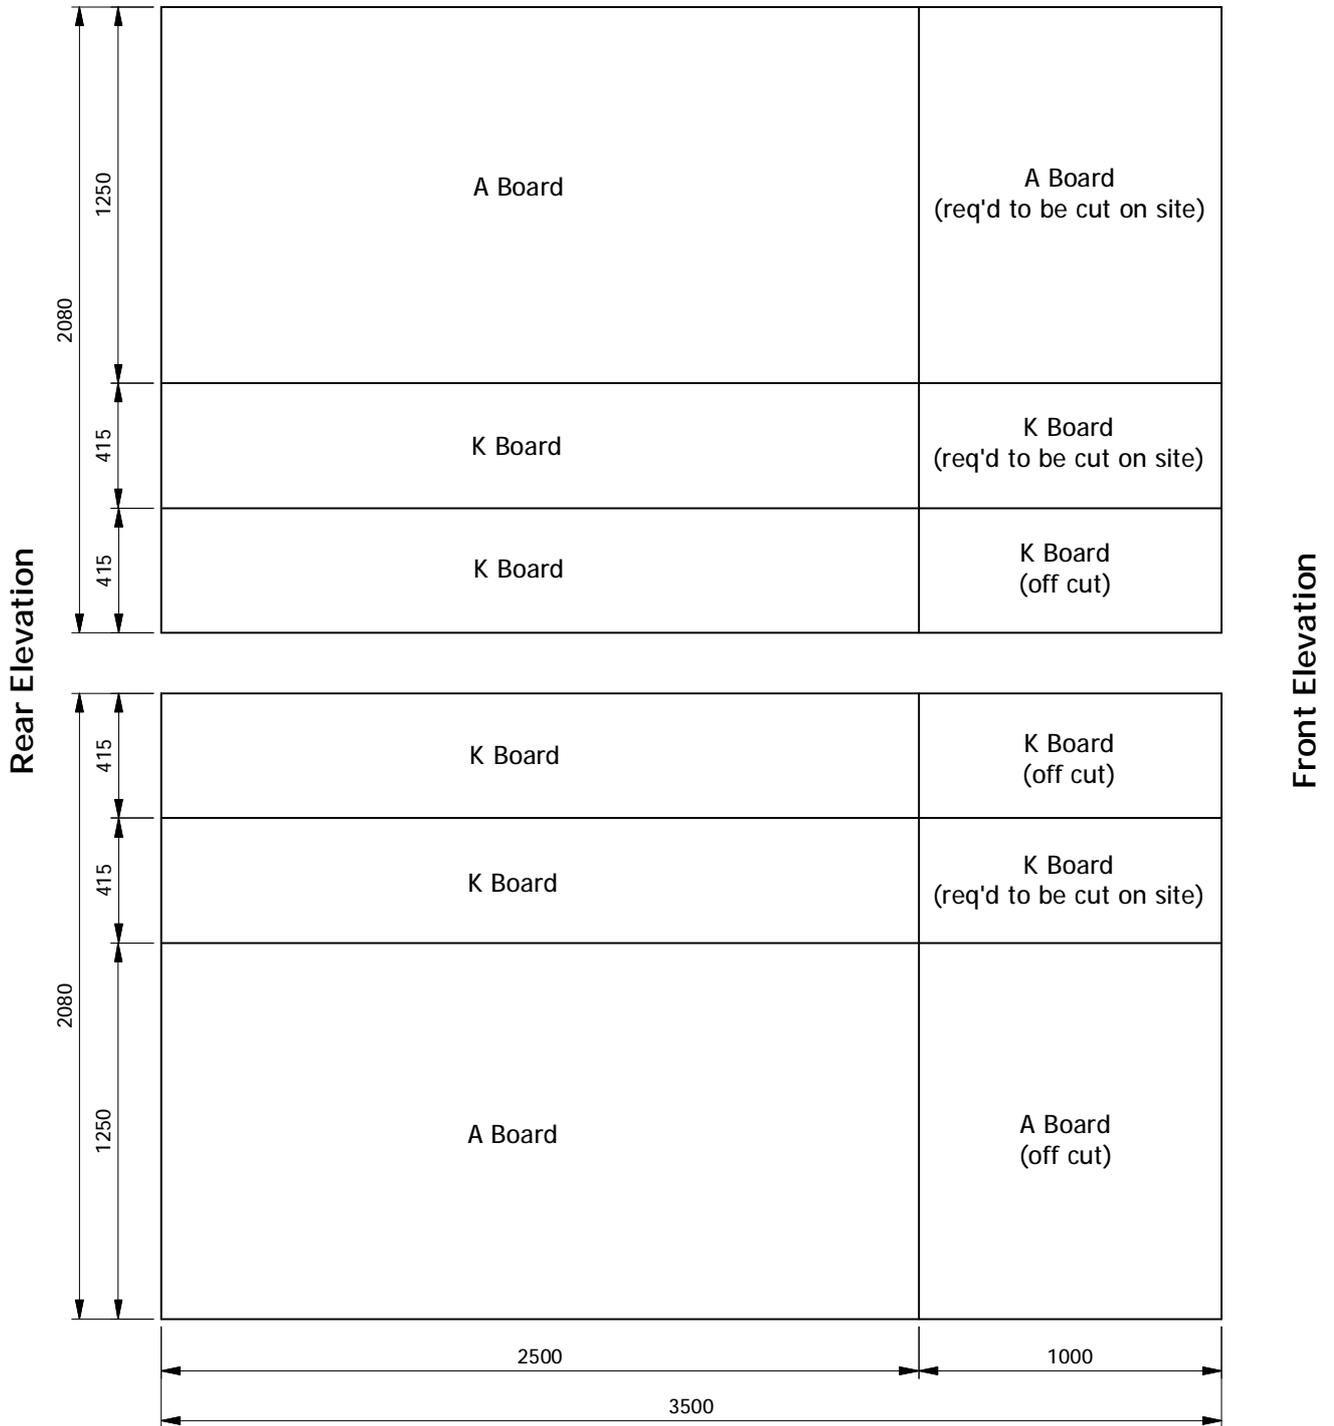

| INSULATION BOARDS | |
|-----------------------|-----|
| Description | Qty |
| Panel A (1250x2500mm) | 3 |
| Panel K (415x2500mm) | 6 |

| SCREWS AND METAL BRACKETS | |
|--|-----|
| Description | Qty |
| Diameter 3x50mm Screws for roof insulation | 150 |
| Diameter 3x20mm Screws for metal brackets | 50 |
| Metal brackets | 12 |